

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## FOR HOUSEHOLD USE ONLY

**READ ALL INSTRUCTIONS BEFORE USING—SAVE THESE INSTRUCTIONS**

**Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**⚠️WARNING**—To reduce the risk of death by electric shock:

1. Always unplug the unit immediately after using.

**⚠️WARNING**—Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

2. If an appliance falls into water, unplug immediately before removing the unit. Do not reach into the water.

**⚠️WARNING**—To reduce the risk of burns, electrocution, fire or injury to persons:

3. An appliance should never be left unattended when plugged in. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Use this appliance only for its intended use as described in this manual.
8. Only the use of original Shark attachments are allowed for the safe use of the product.
9. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been

- dropped, damaged or dropped into water. Contact Shark customer service for examination and repair.
10. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
  11. Never block the air openings of the appliance or place it on a soft surface, such as a bed or sofa, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
  12. Never use on someone who is sleeping.
  13. Never drop or insert any object into any opening.
  14. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
  15. Do not use an extension cord with this appliance.
  16. Do not direct hot air toward eyes or other heat-sensitive areas.

17. Attachments may be hot during use. Allow them to cool before handling.
18. Do not place appliance on any surface while it is operating.
19. While using the appliance, keep your hair away from the air inlets.
20. Do not operate with a voltage converter.
21. Do not use this appliance on hair extensions or wigs unless recommended by the hair extension or wig manufacturer.
22. If hair styling product is being used in conjunction with this appliance please read and follow all of the hair styling product safety warnings and instructions before use.

**TECHNICAL SPECIFICATIONS** Voltage: 220-240V, 50-60Hz, 1700W  
2024 SharkNinja Operating LLC.  
For accessories and replacement parts, visit [sharkclean.eu](https://sharkclean.eu)

## TWO (2) YEAR LIMITED GUARANTEE

When a consumer buys a product in Europe, they get the benefit of legal rights relating to the quality of the product (your statutory rights). You can enforce these rights against your retailer. However, at Shark® we are so confident about the quality of our products that we give you an additional manufacturer's guarantee of two years. These terms and conditions relate to our manufacturer's guarantee only – your statutory rights are unaffected. The conditions below describe the prerequisites and scope of our guarantee. They do not affect your statutory rights or the obligations of your retailer and your contract with them.

### Shark® Guarantees

Your Shark unit constitutes a sizeable investment. Your new hairdryer needs to work properly for as long as possible. The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

Every Shark machine comes with a free parts and labour guarantee. You'll also find online support at [sharkclean.eu](https://sharkclean.eu)

### How do I register my Shark guarantee?

You can register your guarantee online within 28 days of purchase. To

save time, you'll need the following information about your hairdryer:

- Date you purchased the unit (receipt or delivery note).

To register online, please visit [sharkclean.eu](https://sharkclean.eu)

### IMPORTANT

- The guarantee will only cover your product from the date of purchase.
- Please keep your receipt at all times. Should you need to use your guarantee we will need your receipt to verify the information you have supplied to us is correct. The inability to produce a valid receipt may invalidate your guarantee.

### What are the benefits of registering my free Shark guarantee?

When you register your guarantee we'll have your details to hand if we ever need to get in touch.

You can also receive tips and advice on how to get the best out of your Shark unit and hear the latest news about new Shark® technology and launches. If you register your guarantee online, you'll get instant confirmation that we've received your details.

### How long are new Shark machines guaranteed for?

Our confidence in our design and quality

control means that your new Shark unit is guaranteed for a total of two years.

### What is covered by the free Shark guarantee?

Repair or replacement of your Shark machine (at Shark's discretion), including all parts and labour. A Shark guarantee is in addition to your legal rights as a consumer.

### What is not covered by the free Shark guarantee?

1. Normal wear and tear of wearable parts (such as accessories). Replacement parts are available for purchase at [sharkclean.eu](https://sharkclean.eu)
2. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance or damage due to mishandling in transit.

3. Damage caused by maintenance not authorised by Shark.

### Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark unit. You'll find a full range of Shark spares and replacement parts/accessories for all Shark machines at [sharkclean.eu](https://sharkclean.eu)


Please remember that damage caused by the use of non-Shark spares may not be covered under your guarantee.

## OPERATING INSTRUCTIONS

1. Slide the power button to turn the dryer on and off.
2. Press the airflow button to choose a low, medium, or high airflow.
3. Press the temperature button to choose no heat, or low, medium, or high temperature. Press and hold temperature button for 2 seconds to activate Scalp Shield Mode.
4. Press and hold the Cool Shot button for a cool burst of air to set your style.
5. To attach any accessories included with your model, press them into the nozzle outlet. You will know they are properly attached when they click in place.
6. To remove an accessory, slide the lock down and lift the accessory off the nozzle by holding onto the touchpoints identified in your Styling Guide.
7. To remove the filter cover, twist it off the back of the unit. To attach the filter cover, twist it back onto the back of the unit clockwise.
8. Rating label location.

### How to open and close dryer:

- To open, hold the handle with one hand and use your other

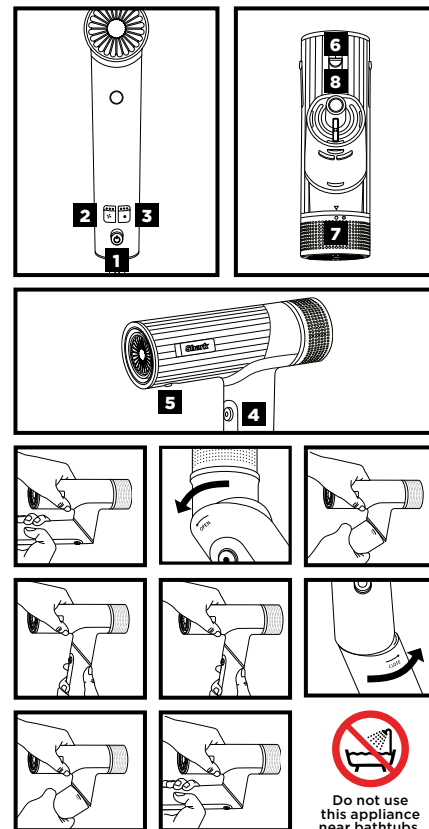

Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- hand to twist the nozzle in the direction of the OPEN arrow.
- To close, hold the handle with one hand and use your other hand to twist the nozzle in the direction of the CLOSE arrow.

**For further operating instructions, please consult the Styling Guide.**

#### **Storage, Cord Safety, and Maintenance/Cleaning:**

- Ensure the cord is not knotted, twisted, or wrapped around any nearby objects when in use.

- Store the unit in a dry location away from water and other heat sources. Store brush accessories so the bristles are not touching any surfaces to help prevent bristle damage
- Clean the filter on the back of the unit monthly. To clean the filter, first twist the filter cover counterclockwise off the back of the unit, then use a new toothbrush to brush off any dust or debris on the filter. Once the filter is clean, twist the filter cover back onto the back of the unit.
- Remove any hair on the brush accessories after every use to help maintain performance.

## **TROUBLESHOOTING & ERROR CODES**


### **MAINTENANCE/CLEANING**

#### **Reduction in airflow.**

A change in airflow or air power, airflow blockages, and/or visible buildup on the inlet at the back of the unit could indicate your unit needs to be cleaned. To maintain performance, clean the filter at the back of the unit every month, using a new toothbrush.

#### **Removing the Filter**

1. Turn off the unit and unplug it. Rotate the filter cover on the back of the unit counterclockwise, then pull it off. Then rotate the filter counterclockwise and pull it off.

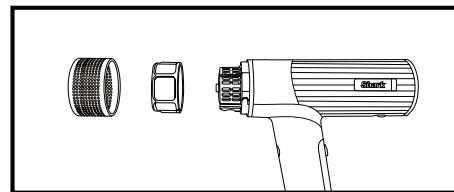

#### **Cleaning the Filter**

1. Soak the filter in warm, soapy water for at least 30 minutes.
2. Wipe down the back of the unit with a dry microfibre cloth or a new toothbrush to remove the debris.

3. After 30 minutes, remove the filter from the water and rinse it thoroughly under a tap.
4. Pat the filter dry with a microfibre cloth. Let the filter air-dry completely for up to 24 hours before reinstalling.
5. To reinstall the filter, reinsert it and rotate it clockwise. Then align the filter cover and rotate it clockwise until it fits securely.

### **OVERHEATING**

#### **Hair dryer is overheating or shuts off.**

This unit is equipped with a temperature-protective thermostat. If for some reason your hair dryer overheats, the thermostat will automatically turn the unit off. To prevent power-down recurrence, unplug the hair dryer and set it aside to cool, or press the Cool Shot button during use. Overheating may result if the unit is powered on for a long duration. Overheating can also indicate a blockage or dust buildup. To prevent overheating, clean the filter at the back of the unit every month, using a new toothbrush. Make sure you are not covering the filter with your hand when operating the unit, as this could also cause overheating. If overheating continues to occur, visit [sharkclean.eu](https://sharkclean.eu)

# CONSIGNES DE SÉCURITÉ IMPORTANTES

Lors de l'utilisation d'un appareil électrique, il est important de toujours prendre quelques précautions simples, notamment en présence d'enfants, et de respecter les consignes de sécurité suivantes :

## RÉSERVÉ À UN USAGE DOMESTIQUE LISEZ LA NOTICE D'UTILISATION AVANT UTILISATION ET CONSERVEZ-LA

N'utilisez pas cet appareil à côté de baignoires, douches, lavabos ou autres récipients contenant de l'eau.

**⚠ AVERTISSEMENT**—Afin de réduire le risque de décès par électrocution :

1. Débranchez toujours l'appareil immédiatement après utilisation.

**⚠ AVERTISSEMENT : Ne pas utiliser cet appareil à proximité d'un bain, douche, lavabo ou tout récipient contenant de l'eau.**

2. Si un appareil tombe dans l'eau, débranchez-le immédiatement avant de le retirer. N'essayez pas de le rattraper s'il tombe dans l'eau.

**⚠ ATTENTION**—Afin de réduire les risques de brûlures, d'électrocution, d'incendie ou de blessures corporelles :

3. Un appareil ne doit jamais être laissé sans surveillance lorsqu'il est branché.

Si l'appareil est dans la salle de bain, débranchez-le après utilisation car la proximité de l'eau présente un danger même lorsque l'appareil est éteint.

4. Si le cordon d'alimentation est détérioré, faites-le remplacer par le fabricant, son personnel de maintenance ou des personnes de qualifications similaires, pour éviter tout danger.
5. Cet appareil n'est pas conçu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques sensorielles ou mentales sont réduites, ou présentant un manque d'expérience et de connaissances, à moins que celles-ci aient été supervisées ou aient reçu des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité.
6. Les enfants doivent être surveillés afin qu'ils ne jouent pas avec l'appareil.

### Overheating Error Code



If you are experiencing a different error code, please visit [sharkclean.eu](http://sharkclean.eu)

7. Utilisez cet appareil exclusivement tel que décrit dans cette notice.
8. Seuls les accessoires d'origine Shark pour ce produit sont autorisés pour un usage sécurisé du produit.
9. N'utilisez jamais cet appareil si le câble d'alimentation ou la prise sont détériorés, s'il ne fonctionne pas correctement ou s'il est tombé, a été endommagé ou plongé dans l'eau. Contactez le service client Shark pour examen de l'appareil et réparation.
10. Éloignez le câble d'alimentation des surfaces chaudes.  
N'enroulez pas le câble d'alimentation autour de l'appareil.
11. Ne bloquez jamais les ouvertures d'air de l'appareil et ne le posez pas sur une surface souple, comme un lit ou un canapé, car les ouvertures d'air pourraient être bloquées. Gardez les ouvertures d'air exemptes de peluches, de cheveux et autres.
12. N'utilisez jamais l'appareil sur quelqu'un qui dort.
13. N'insérez et ne laissez jamais tomber d'objet dans une des ouvertures.
14. N'utilisez pas l'appareil en extérieur, dans des endroits où des aérosols (pulvérisateurs) sont utilisés ou dans des lieux où de l'oxygène est administré.
15. N'utilisez pas de rallonge avec cet appareil.
16. Ne dirigez pas l'air chaud directement vers vos yeux ou toute autre zone sensible.
17. Les accessoires peuvent chauffer lors de l'utilisation. Laissez-les refroidir avant de les manipuler.
18. Ne posez pas l'appareil en marche sur une surface.
19. Gardez vos cheveux éloignés des entrées d'air lorsque vous utilisez l'appareil.
20. N'utilisez pas l'appareil avec un convertisseur de tension.
21. Veillez à ne pas utiliser cet appareil avec des extensions de cheveux ou perruques, sauf si cela a été recommandé par leurs fabricants.
22. Si des produits coiffants ont été utilisés conjointement avec l'appareil, veuillez lire et suivre les avertissements en matière de sécurité et la notice d'utilisation des produits en question avant utilisation.

**CARACTÉRISTIQUES TECHNIQUES** Tension : 220-240V, 50-60Hz, 1700W

© 2024 SharkNinja Operating LLC.

Pour trouver des accessoires et des pièces de rechange, rendez-vous sur le site [www.sharkclean.eu](http://www.sharkclean.eu)

## CONTRAT DE GARANTIE COMMERCIALE

Lorsqu'un client achète un produit en Europe, il bénéficie des droits légaux relatifs à la qualité du produit vos « droits légaux » : garantie légale de conformité de 2 ans à compter de la délivrance et garantie légale des vices cachés de 2 ans à compter de la découverte du vice. Le client peut faire valoir ces droits à l'encontre de son détaillant. Shark a une grande confiance dans la qualité de ses produits et fournit donc une garantie commerciale supplémentaire gratuite pouvant aller jusqu'à deux ans.

Ces conditions contractuelles se réfèrent uniquement à la garantie commerciale et ne portent aucune atteinte à vos droits légaux. Veuillez noter que la garantie commerciale n'est disponible que dans le pays où le produit est acheté. Nos conditions de garantie commerciale sont les suivantes. Elles n'affectent en rien vos droits légaux ni les obligations de votre revendeur à votre égard.

### Garantie commerciale Shark®

Votre appareil Shark constitue un investissement important. Votre nouvel appareil doit donc fonctionner correctement le plus longtemps possible. La garantie commerciale fournie avec l'appareil reflète la confiance du fabricant dans ses produits et témoigne de leur qualité de fabrication.

Chaque produit Shark® bénéficie de garanties légales (conformité et vices cachés). Notre service client (+33 (800) 908874) est ouvert du lundi au vendredi de 8h à 20h, le samedi de

9h à 19h et le dimanche de 10h à 18h30. L'appel est gratuit et vous serez directement mis en relation avec un représentant Shark. Vous trouverez également une assistance en ligne sur le site [sharkclean.eu](http://sharkclean.eu)

### Comment puis-je enregistrer ma garantie commerciale Shark ?

Vous pouvez enregistrer votre garantie commerciale en ligne dans un délai de 28 jours après la date d'achat de votre produit. Pour gagner du temps, préparez les informations suivantes à propos de votre appareil :

- Date d'achat de l'appareil (ticket de caisse ou bon de livraison)
- Pour l'enregistrer en ligne, rendez-vous sur le site [sharkclean.eu](http://sharkclean.eu). "Les produits achetés directement auprès de Shark® sont automatiquement enregistrés."

### IMPORTANT

- La garantie commerciale couvre votre Produit pendant 2 ans à partir de la date d'achat. Il est indispensable de conserver le justificatif d'achat.
- Pour utiliser la garantie commerciale, vous devez présenter votre justificatif d'achat afin que nous puissions vérifier vos droits. L'impossibilité de présenter un justificatif d'achat valable peut annuler la garantie commerciale.

**Quels sont les avantages de l'enregistrement de ma garantie commerciale gratuite Shark ?**

SHARK and SPEEDSTYLE are registered trademarks in the European Union of SharkNinja Operating LLC.

1st/2nd Floor Building 3150,  
Thorpe Park, Century Way, Leeds,  
England, LS15 8ZB

Telephone: +44 (0)800 862 0453  
[www.sharkclean.eu](http://www.sharkclean.eu)

SharkNinja Germany GmbH,  
Rotfeder-Ring 9,  
3rd Floor,  
60327 Frankfurt am Main,  
Germany

